

 
HD CAMERA USER MANUAL

Packing inspection

Make sure that the package includes: camera, USB-C (or micro USB) charging cable, instruction manual, *16/32/64/8G card (if included)
Connect the computer to confirm that the lens is complete and the battery is in good condition.

Power ON/OFF:

The camera must be inserted the TF (memory) card before it on. Long press the power button. The blue light flashes and goes out to enter the video., camera start cyclic recording.

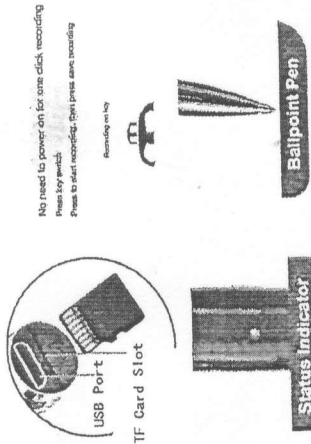

*For long-term video recording, a video file will be automatically saved in 5 minutes by default.
*Press the power button briefly to stop recording (blue light stays on = standby mode).
*In standby mode: press the power button once to enter the loop recording; Press the power button twice quickly and take a picture.
*press and hold the power button for 6 seconds to turn it off (blue light goes out).

Work while charging:

*Plug in the charger and enter the charging mode. Pressing the power-on button for a short time will push out the charging mode and enter the video recording. Just like the normal battery power-on and power-off function, it can also be turned off, and then it will enter the charging mode again after being turned off.

Please click on the purchase link to view the operation video before use the product.

Precautions:

- Before used, the camera must be inserted the TF (Micro SD) card, otherwise can not work and if turn on the camera, blue light on about 2 seconds and red light flashes fast 3 times, then camera will be off.
- Time Setting must be done before each recording, if you need the Timestamp, the camera build-in battery, the battery works about 40-50 mins each fully charged.
- Lens focus on the object and keep it from the object by 50cm above, this is useful to obtain the correct, natural color, clear and stable image.

- Charging:**
*Use DV3.7V/5V, 1A/2A charger to charge the product, the red light flashes slowly when charging.
*After charging, the red light turns on.
- Time setting:**
1. Insert the sd card to the product and turn it on.
2. After connecting the camera to the computer, open the root directory, there is a time document file in it (TXT file), edit it in the document.
- Time**
VIDEO
PHOTO
- Time display format: year-month-day hour: minute: second
- 2025-05-01 00:00:00 Y
- The setting time is as follows:

- d. The camera will occupy about 6G memory space per hour.
It can support 128G memory card maximally.
e. The power consumption per hour of camera is about 130mAh by day. Never use the equipment for unauthorized purpose.


Parameters	
Item	AI
Video format	M-JPEG
Video encoding	1920*1080P
Video resolution	30fps/15fps
Video frame rate	Attached software in the operating system, or the mainstream video playing software
Media playing software	JPG
Picture format	4MP
Image ratio	4:3
Compatible OS	Windows me/2000/xp/2003/Vista; Mac os 10.4; Linux;
Charging voltage	DC-5V
Charging time	About 1.5hours
Interface	Mini 5 Pin USB
Storage	Micro SD(TF) card
Battery	High-capacity lithium polymer

Maintenance and Frequently Asked Questions :

Attention:


- a. Application: Please abide by the relevant regulations and laws in your country. The product is forbidden for any illegal purposes. The user is fully responsible for the illegal purposes.
Compliance and Privacy Reminder (within the United States)
1. Legal use: Miniature camera glasses are mainly used to protect people's life safety and property rights. They are strictly prohibited from being used for illegal purposes such as candid photography.
2. Right to privacy: Respect the privacy rights of others. Do not monitor or photograph others without permission.
3. Legal provisions: When using miniature camera glasses for monitoring, it must comply with local laws and regulations. Unauthorized monitoring may violate the law and lead to legal liability.
4. Data management: Properly manage and store the captured data to avoid leaking others' private information. If the device is lost or stolen, take timely measures to prevent data from being misused.
b. Battery: The working time becomes shorter with increase of the use time. Please charge the battery fully before using when the product is in long-time storage.
c. File safety: The product is not a professional storage device, not guarantee the completeness and safety of the stored files. Please back up your important files on the computer or other storage devices timely.
d. Video quality: The product is not a professional video device, not guarantee the effect of the taken videos reaches your requirements.

No display time: 2025-05-18 23:59:39 N
Y means there is time to display, N means there is no time display.

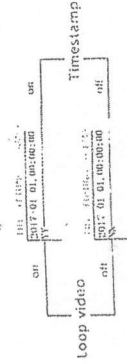

Video reading:

- *Connect the camera to the computer with the standard data cable (blue) stays on = data reading.
- *Boot without card. After the blue light is always on, turn it off by backing and blue for 5 times.
- *It can be read via a card reader.

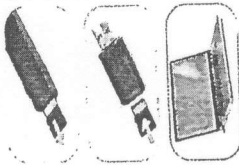

Number	Problem	Reason	Solution
1	Unable to record/damaged file	SD card is not pushed to the camera, capacity is insufficient	Reinsert the card and use the Authentic SD Card Storage
2	The audio and video are not synchronized or noisy	The microphone is not oriented correctly, and the wind noise	Adjust the angle of the microphone backward and wear a windshield
3	Insufficient power/short battery life	The battery is not fully charged	Fully charge/replace the battery
4	The computer is unable to recognize the device	Bad USB contact, not pushed into the device	Change the USB port and ensure that the SD card is accurately inserted into the card slot
5	iPhone is not supported.	USB interface incompatibility	Use the Lightning - to - USB - C adapter, or transfer with the help of a computer
6	equipment malfunction	Long-term non-use of the equipment may cause the battery to be exhausted and unable to charge.	Perform regular charging maintenance when the equipment is not in use.

e. Working temperature: 0-40 °C

- f. Working humidity: 20%-80%, please avoid the humid working environment, the product is not waterproof
g. Shoot illumination: Please shoot in the environment with enough illumination, don't make the lens face the sun, the strong light source etc. directly, avoiding the harm to the optical components in the glasses frame is connected to the power source. Do not pull hard on the outside of the temple, as this may cause damage to the product.
h. When the product is recording, the part of the glasses frame near the temple area will heat up slightly. This is a normal phenomenon. If you feel uncomfortable, please let it cool down before continuing to use it.
i. When the product is recording, the part of the glasses frame near the temple area will heat up slightly. This is a normal phenomenon. If you feel uncomfortable, please let it cool down before continuing to use it.
j. Cleaning requirements: Please don't use the product in the high dusty environment against the dust to the camera lens and other components, that effects the video quality. Please clean the lens with lens paper or glass cloth gently, keep clean.
k. Others: The product belongs to the precise electronics. Please avoid the strong impact, shock. Please don't use the product in strong magnetic field, or in strong electric field.
l. Complement: The other unknown matters, please contact with your local dealers. After-sales mailbox: cy.chen888@163.com

Made in China