 


User Operational Manuals

Before use, please make sure to read the user manual first

Introduction to this machine:

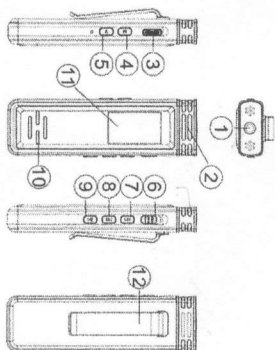

- 1: Headphone (Line-in) 2: microphone
- 3: USB interface 4: Menu/Delete Key
- 5: Volume/Repeat key 6: record button
- 7: UP/Fast Rewind 8: Flip Down/Fast Forward
- 9: Power (Play/Pause) 10: speaker
- 11: display screen 12: clip

Special operation instructions for buttons

In this manual, the terms "short press" and "long press" often appear, representing the following meanings:

1. short press: Press the button for less than 1.2 seconds.

2. long press: Press the button for more than 1.2 seconds until the corresponding display appears on the screen.

※ When operating this machine, if the screen backlight is off, first press any button to turn on the screen backlight, and then perform key operations. All key functions of the machine are only effective when the screen is on.


Power on/off

1. **Power on:** When the device is turned off, long press the "M" button on the device, and the corresponding startup prompt screen will appear in the display window to start the device.

2. **Power off:** When the device is turned on, long press the "M" button, and the display window will display **BYE.BYE**, then it will shut down. When the system idle time reaches the user set shutdown time, the machine will also

automatically shut down.

Main menu function module

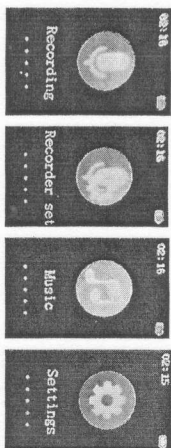

Recording play Record Settings Music play System settings

sound recording

1. **Recording:** In any state, press the Record button to the "REC" position to enter the recording mode. The display screen will display "Recording" and corresponding recording instructions, and the recording time will start counting in seconds.

2. **suspend recording:** During the recording process, short press the "M" button to pause the recording. The corresponding recording pause indicator will appear on the display screen, and the recording time will pause. Short press the "M" button again to resume

recording.

3. **Save recording:** In recording mode, push the "Record" button to the "Save" position to stop and save the recording. After the screen prompts "Save", enter the playback standby mode. Short press the "M" key to play the current recording file.

※ If the battery level is extremely low, the machine will automatically save the current recording file and shut down when the battery is low.

Recording Settings:

When selecting the recording settings option on the main menu interface, short press the "M" key to enter the recording settings menu. Short press the "M" or "M" key to select the menu option that needs to be set. After entering the settings menu, short press the "M" key to return.

1. **Recording source :** Choose built-in microphone or Line in for recording.

2. **on/off Denise:** Turn off or on noise reduction. When turned on, the recording noise will be smaller. After turning on noise reduction, the recording bit rate defaults to 512Kbps and cannot be changed.

3. **Bitrate Settings:** Short press the "M" key to enter, short press the "M" or "M" key to select the recording format, and short press the "Y" key to confirm.

key to confirm. There are two formats for recording on this device: MP3 format (32Kbps, 128Kbps), WAV format (512Kbps, 1024Kbps, 1536Kbps), and other recording sampling rates. The higher the sampling rate, the better the recording quality, and the higher the machine power consumption. The lower the sampling rate, the lower the recording quality, and the lower the machine power consumption.

Record Subsection:

Under the recording settings menu, short press the "M" or "M" keys to select segmented recording. Short press the "M" key to enter the selection of file size for recording saving, including: no segmentation, 30 minutes, 60 minutes, 90 minutes, etc. If 30 minutes are set, save a file within 30 minutes, or choose not to segment.

5. **AVR mode :** Under the recording settings menu, short press the "M" or "M" keys to select voice control mode. Short press the "M" key to enter the selection of on or off. When selecting on recording, no sound will pause the recording. When the machine detects sound, it will automatically resume recording. You can also set the appropriate voice control sensitivity for different usage environments.

6. **Gain Setting:** Under the recording settings menu, short press the "M" or "M" keys to select gain settings. Short press the "M" key to enter and set the MIC sensitivity during recording, which can be adjusted from 00 to 07 levels (adjust the size of the recording sound, the higher the level, the louder the sound will be, and the noise will also increase).

menu, short press the "M" or "M" keys to select gain settings. Short press the "M" key to enter and set the MIC sensitivity during recording, which can be adjusted from 00 to 07 levels (adjust the size of the recording sound, the higher the level, the louder the sound will be, and the noise will also increase).

7. on/off Monitor:

Turn off or on listening, if listening is turned on, you can hear the recorded audio source by plugging in headphones during recording.

8. **set on/off:** Under the recording settings menu, short press the "M" or "M" key to select timed recording, and short press the "M" key to enter the settings.

(1). **cycle once/daily :** After short pressing the "M" key to enter, short press the "M" or "M" key to select whether to turn it on or off.

(2). **Timed recording cycle:** After short pressing the "M" key to enter, short press the "M" or "M" key to select single or daily, etc. Short press the "M" key to confirm and exit. (If set daily, recording will start at the set starting time each day, and the set single recording can only be recorded once on the same day).

(3). **timing time:** Short press the "M" key to enter the settings, short press the "M" or "M" key to

adjust the time, short press the "Y" key to jump to the next time setting, short press the "M" key to confirm exit (please set a time higher than the system time).

● **LINE-IN line recording setup** (Select line-in audio source input)

1. Through the LINE-IN Port, Selectable audio direct input record, Can Access (CD, recorder, DVD, Cell phone) and other products sound source, Press "REC" again to record.



2. **External MIC recording:** After connecting the external MIC through the LINE-IN interface, Same as built-in MIC recording.

3. A recording of the call:

After connecting the telephone recording adapter through the LINE-IN interface, Same as built-in MIC recording.

Play/pause

In the power on state, short press the "M" or "M" button to select recording or music playback, short press the "M" button to enter the playback interface, then short press the "M" button to start playing, and short press the "M" button to

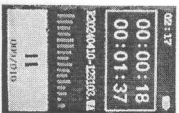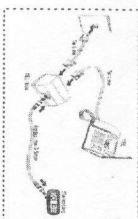

pause playback.

● **Adjust the volume**

When in playback mode, long press the "V" button to enter the volume adjustment interface, and the corresponding volume level icon will also appear on the screen. Short press the "◀" or "▶" button again to adjust the volume.

● **UP/DOWN selection , Fast forward/back**

While it's playing , Simply Press "◀" or "▶" to select the last file or the next file to play. Long Press "◀" or "▶" key to fast-forward, fast-back play.

● **A-B repetition**

When playing, short press the "V" button to enter A-B repeat mode, and corresponding instructions will also appear on the screen.

When short pressing the "V" key to enter the repeat mode, point A has been set, and the A-B symbol appears on the display screen. Point B starts flashing, and then short pressing the "V" key again stops flashing. At this point, point B has been set, and the player will automatically start repeating the content from point A to point B. During the A-B repeat playback, short pressing the "V" key will abandon the A-B repeat.

● **Play settings (Music playback and**

8

language choices.

3.Display Settings: Can set screen brightness, backlight time, screen protection, etc.

4.Shutdown settings: Can be set for automatic shutdown and timed shutdown.

5.Password setting: Short press

the "◀" or "▶" key to select the password setting menu, and then short press the "M" key to enter.

(1). **Set on/off:** Short press the "M" key to select whether the password is turned on or off, and 0000 indicates no password.

(2). **Password Setting :** Short press the "◀" or "▶" key to select password settings, short press the "M" key to enter, enter the password, change the password by entering the old password first and then the new password, short press the "◀" or "▶" key to edit the password, short press the "V" key to jump to the next setting, and short press the "M" key to confirm after setting.

6.Informations : You can view the basic information of this machine, including machine model, software version, total capacity, and used capacity.

7. Factory setting : Factory settings can be restored. After selecting YES, press the "M" key briefly to confirm the restoration.

12

recording playback)

When in playback mode, long press the "M" key to enter the playback settings menu. Short press the "◀" or "▶" key to select the playback settings option. After entering the settings menu, short press the "M" key to return.

1.Jump time: After selecting the playback mode, short press the "M" key to enter, short press the "◀" or "▶" key to select a number, and short press the "V" key to jump to the group settings. This function plays the selected time period for playback.

2.Cycle mode : After selecting the playback mode, short press the "M" key to enter. Short press the "◀" or "▶" key to select single loop, all loop, random play, etc. Short press the "M" key confirm.

(1). **Repeat one:** Repeat playback for only one file that is currently playing.

(2). **Repeat All:** Loop through all files in the folder.

(3). **Shuffle:** Randomly play files in the folder, and they will automatically stop playing after completion.

3.Equalizer: Under the playback settings menu, short press the "◀" or "▶" keys to select sound effect settings. Short press the "M" key to enter. There are options such as: normal,

9

(All settings will be restored to their factory settings).


● **Connect to the computer**

Connect the USB interface of the machine to the computer through a data cable until the disk icon appears on the computer screen, and then upload/download files can proceed.

Note: During data transmission, the connection cannot be disconnected, otherwise it may cause data loss, system errors, etc. Please use normal methods to remove removable disks.

● **Charging**

The USB interface that connects the machine to the charger through a data cable. The charge indicator icon appears on the screen. Battery symbol to stop running when fully charged. (The charging time depends on the power of the charger, it usually fills up in about 3-4 hours)
※ Extend Battery Life. When the machine was down to its last bar of electricity, Please charge in time.

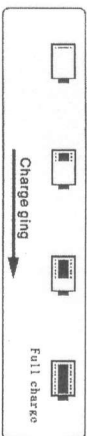

13

popular, rock, jazz, classical, country, etc. Short press the "M" key to confirm.

4. Variable speed playback: In the playback settings menu, short press the "◀" or "▶" key to select variable speed playback, short press the "M" key to enter, and then short press the "◀" or "▶" key to adjust. There are levels adjustable from -7 to 7, short press the "M" key to confirm and exit (level 0 is the normal playback speed, level 7 is the slowest, and level 7 is the fastest).

● **Delete**
In playback mode, long press the "M" key to enter the playback settings menu, and short press the "◀" or "▶" key to select single or all deletions.

1.Delete one: After selecting a single delete menu, short press the "◀" or "▶" key to select YES, and short press the "M" key to confirm the deletion of the current file.

2.Delete all: After selecting the delete all menu, short press the "◀" or "▶" key to select YES, and then short press the "M" key to delete all files in the folder.

3.Abandon deletion: After selecting NO on the deletion interface, short press the "M" key to discard the deletion.

1. Warning: In the music playback

10

● **Specification parameters**

named	Specification parameters
Maximum of number of recording segments	999 sections in total
Recording quality	MP3 format : 32Kbps-128 Kbps , WAV format 512Kbps-1536 Kbps Factory default: 512Kbps
headphone output	3.5pie stereo jack (L) 9mW + (R) 9mW (320Ohm)
horn	1 W (8 Ohms)
Recording source	Built in microphone recording and line recording
Suggested usage environment	0°C-40°C
Power supply method	Built in lithium battery (300MA) : 3.6V-4.2V
Built in speaker	8R/1W 24mm*15mm
Recording distortion	<10% (maximum volume)
storage	Built in TF card
display screen	1.14-inch TFT color screen
Battery consumption	About 30 hours

14

interface, delete the music file. In the recording playback interface, delete the recording file. The deletion operation is permanent and the file cannot be restored. Please be cautious whether to delete the file.

● **Settings:**

Select System Settings from the main interface menu, short press the "M" key to enter, short press the "◀" or "▶" key to select the following settings options, and short press the "M" key to return after entering the settings menu.

1.Date&Time: Short press the "◀" or "▶" keys to select the date setting and time, and short press the "M" key to enter.

(1). **Time setting:** After entering the time setting menu, short press the "◀" or "▶" keys to adjust the number, short press the "V" key to skip the group time adjustment, and short press the "M" key to save and exit after setting.

(2). **Date setting:** After entering the date setting menu, short press the "◀" or "▶" keys to adjust the number, short press the "V" key to jump to the group year, month, and day adjustment, and short press the "M" key to save and exit after setting.

2.Language : This machine supports multiple

11

USB communication standard	High speed 2.0
Body weight	Approximately 57.3g (bare metal)
Body size	87.8mm*27mm*11.4mm

Statement: Our company won't in charge of data missing caused by using the machine or repairing it. Therefore please back up on your own if there's important data in the machine.

15