 


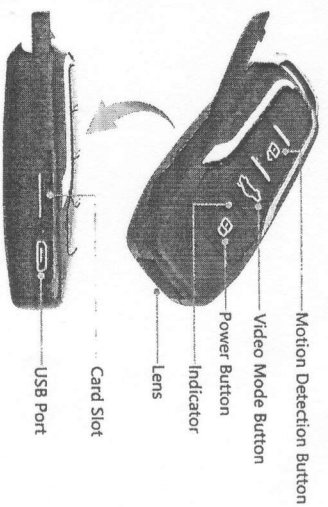

Warm tips:

1. To make sure to format the SD card before using it. And it can support up to 128 GB SD card.
2. Please insert an SD card before use.
3. The standby mode will last for one minute. If there is no other operation, the product will turn off to save power.

V. How to remove the time and date watermark?

The recorded video will show the time and date watermark by default. If you want to remove the time and date watermark in the recorded video, you can follow the steps below.

1. Insert the SD card and turn on the camera, the Micro SD card will automatically generate a text file named "time.txt"

File Edit Format View Help

IDATE_TIME]
YEAR=2022
MONTH=01
DAY=01
HOUR=23
MINUTE=59
SECOND=59
DATE_STAMP=Y


Note:

1. If you don't want to show the time stamp on videos/images, you could change Y to N.
2. MONTH / DAY / HOUR / MINUTE / SECOND except YEAR should be typed in a two-digit format, such as 01, 02, 03, instead of 1, 2, 3.

Photo 1


I. Normal Recording Mode:

1. Press and hold the Power Button for 2 seconds. The blue light slowly flashes three times and then stay on. The machine turns on and enters standby state.
2. Short press the Video Mode Button once, the blue light slowly flashes 3 times and then goes out, indicating that the machine is in normal recording mode.
3. Short press the Video Mode Button once again during the video recording, the blue light stays on, the camera saves the video and enters the standby mode.

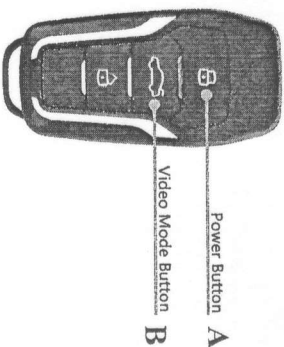

II. Motion Detection Mode:

 1. Press and hold the Power Button for 2 seconds. The blue light slowly flashes three times and then stay on. The machine turns on and enters standby state.
2. Short press the Motion Detection Button once, the blue light goes out, and the red light slowly flashes 3 times and then goes out, indicating that it has entered motion detection recording mode.
3. Short press the Motion Detection Button once again, the blue light stays on, indicating that the camera saves the recorded video and enters the standby mode.

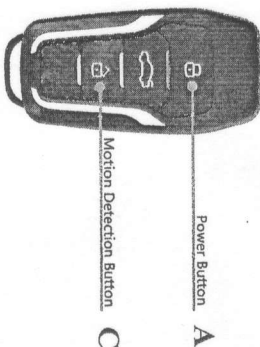


III. Shut Down the Camera:

Press and hold the Power Button for 4 seconds, the red and blue lights flash slowly three times at the same time and then goes out, indicating that the camera saves the recorded video and turned off.

IV. Reset the Camera:

 When the machine freezes and cannot perform any function, press the Power Button and Video Mode Button at the same time to reset the machine to factory settings.

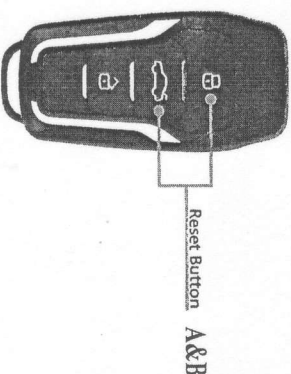

2. In the "time.txt" file (Photo 1): "DATE_STAMP=Y", the default video has the time and date watermark.
3. In the "time.txt" file: change Y to N, then save "time.txt" file to remove the time and date watermark.

VI. Loop recording function:

1. Videos on the SD card will save a file every 5 minutes by default in Normal Recording Mode and will save a file every one minute by default in Motion Detection Mode.
2. When the Micro SD Card is full, the camera will overwrite the files from oldest to newest.

VII. About Charge:

1. The red light slowly flashes when charging. The red light stays on when fully charged.
2. When the camera is in low power status, the red light flashes 5 times, the file is saved and the camera turns off.

VIII. Recording while charging:

3. Please use a 5V/1A USB charger to charge the camera for 4-5 hours before use.
4. Make sure to charge the battery at least once a month.
5. The camera can record about 6 hours of video when fully charged.

the camera is directly connected to the power supply (red light flashes slowly).

1. Normal Recording Mode: Short press the video mode button to start recording directly during charging, the blue light flashes 3 times and then goes out. Short press the video mode button again to save the video file and then turn off the camera, the red and blue lights flash 3 times and then the red light flashes slowly.

2. Motion Detection Mode: Short press the motion detection key to start recording directly during charging, the red light will flash 3 times and then turn off. Press the motion detection key again briefly, the video file and then switch off, the red and blue light flashes 3 times and then the red light flashes slowly.